

Wake the Motor (New Installation)

The Portrait motorised shades are sent from the factory asleep, to conserve the battery charge.

1. Press and hold the shade button on the headrail for 5 seconds
 - i. The LED light will blink green, to indicate the motor is ready
 - ii. If the LED light blinks red, this indicates the motor is now off

Before following the instructions below, please check that the Portrait motorised system is not already configured. The remote(s) and motor(s) are designed to be pre-programmed in the factory and should not require pairing or limit setting.

Only shades of the same type should be programmed to the same channel as this will ensure optimal operation.

Add or Remove Shade from a Remote Channel

The instructions for adding or removing a shade from a channel on the remote is the same.

1. Press the shade button on the headrail 3 times
 - a. The LED will start blinking green, to indicate it is ready to receive a command
2. Remove the battery cover on the remote, then press and hold the SET button for 3 seconds
 - a. The channel lights on the remote will be flashing
3. Press the channel number (1-5) for the shade to be added or removed from
 - a. If the shade is added, it will shift once
 - b. If the shade is removed, it will shift twice
4. Press and hold the SET button, in the battery section of the remote, for 3 seconds

Set or Clear the Upper Limit of a Shade

To avoid any unwanted setup or change to limits of other shades, we recommend that the shade be programmed on its own channel or that other shades are turned off until the limit setting is complete.

1. Move the shade to the desired upper limit
2. Remove the battery cover on the remote, then using a pin press and hold the RESET button for 2 seconds

- a. The channel lights on the remote will be flashing
3. Press the channel number (1-5) of the shade for which the limit is to be set or cleared
 - a. To set the upper limit, simply press the OPEN button on the remote once
 - b. To clear the upper limit, press and hold the OPEN button for 1 second
 - i. If the limit has been set, the shade will shift once
 - ii. If the limit is cleared, the shade will shift twice

Set or Clear the Lower Limit of a Shade

1. Move the shade to the desired lower limit
2. Remove the battery cover on the remote, then using a pin press and hold the RESET button for 2 seconds
 - a. The channel lights on the remote will be flashing
3. Press the channel number (1-5) of the shade for which the limit is to be set or cleared
 - a. To set the lower limit, simply press the CLOSE button on the remote once
 - b. To clear the lower limit, press and hold the CLOSE button for 1 second
 - i. If the limit has been set, the shade will shift once
 - ii. If the limit is cleared, the shade will shift twice

Set or Clear the Favourite Limit of a Shade

1. Move the shade to the desired Favourite location
2. Remove the battery cover on the remote, then press and hold the SET button for 3 seconds
 - a. The channel lights on the remote will be flashing
3. Press the channel number (1-5) of the shade for which the location is to be set or cleared
 - a. To save the location, simply press the star (☆) button on the remote once
 - b. To clear the location, press and hold the star (☆) button for 1 second
 - i. If the location has been set, the shade will shift once
 - ii. If the location is cleared, the shade will shift twice

