

N300842-2
65101-11785-B


Read the instruction before operating your shade

Installation Instructions Honeycomb Shades Specialty Shapes


Perfect Arch




Eyebrow

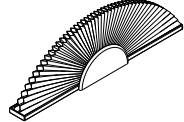


Elongated Eyebrow

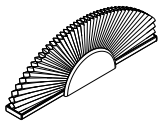


Quarter Round L / R

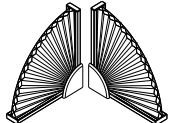


Arch on Top L / R

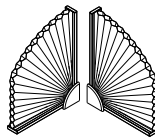


Triangle

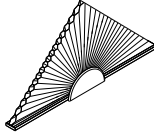

Angle Top L/R

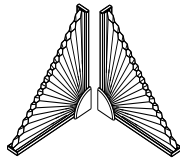

Half Eyebrow L/R

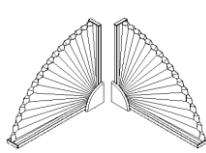

Step 1: Getting Started

Remove the shade from the package. Save the packaging until the shade is installed and working to your satisfaction.

Tools Needed:


- Power drill and drill bit
- Measuring tape
- Screwdriver
- Level
- Pencil




You will need to use the following fasteners for your particular mounting surface.

Surface	Fastener
Wood	3.8x38mm Screws (Provide)
	#6x19mm Screws (Provide)
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provide)
Metal	Sheet Metal Screws (Not Provide)

Check Component/Hardware:

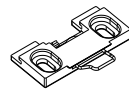

for 25mm S

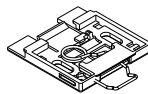

for 45mm S & 45mm D




Bracket Clip



180° Center Template



90° Center Template

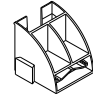

90° Center Support



180° Center Support

Hardware Standard Quantity

For perfect arch, Eyebrow, Elongated Eyebrow, and Triangle:


Order Width (X)	X ≤ 1219mm	X > 1219mm
Installation Bracket	2	4
Bracket Clip (for perfect arch, Eyebrow, Elongated Eyebrow)	4	6
Bracket Clip (Triangle)	6	8
38mm Screw for Installation Bracket	Installation bracket qty x 2	
19mm Screw for Bracket Clip	Bracket Clip qty	

For Quarter Round, Half Eyebrow, Arch on Top, and Angle Top:


Order Width (X)	X ≤ 610mm	X > 610mm
Installation Bracket	2	4
Bracket Clip (Quarter Round, Half Eyebrow, Arch on Top)	2	4
Bracket Clip (Angle Top)	4	6
38mm Screw for Installation Bracket	Installation bracket qty x 2	
19mm Screw for Bracket Clip	Bracket Clip qty	

Step 2: Assemble the Shade

For Perfect Arch, Eyebrow, Elongated Eyebrow, and Triangle (take Perfect Arch as example):
Open the shade and place the rail into the bottom of 180° center support tightly, and then install the front and back 180° center templates:

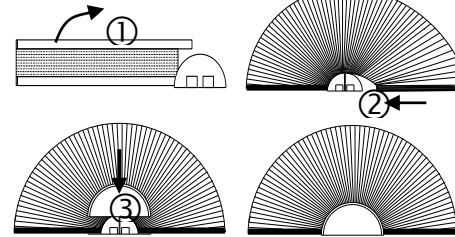


For Quarter Round, Arch on Top, Angle Top, and Half Eyebrow (take Quarter Round as example):
Open the shade and place the rail into the bottom of 90° center support tightly, and then install the front and back 90° center templates:

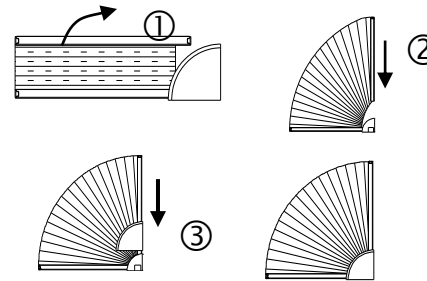


Step 3: Install the Bracket

Mark the bracket location on the mounting surface as shown in the following illustrations.
For Perfect Arch, Eyebrow, Elongated Eyebrow, and Triangle (take Perfect Arch as example):

For shade width $X \leq 1219\text{mm}$, measure 38mm from both ends of the rail to locate the center of the bracket

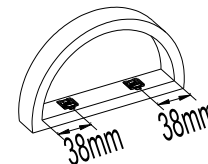


For shade width $X > 1219\text{mm}$, place the bracket evenly along the rail

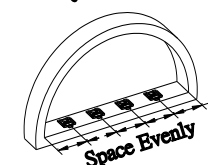


For Quarter Round, Arch on Top, Angle Top, and Half Eyebrow (take Quarter Round as example):


For shade width $X \leq 610\text{mm}$, measure 38mm from both ends of the rail to locate the center of the bracket

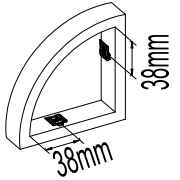

For shade width $X > 610\text{mm}$, place the bracket evenly along the rail

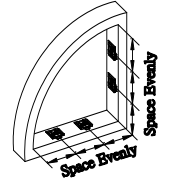

Allocate a minimum distance of 18mm from the edge of window frame to the front of bracket. Align the Installation Brackets and install them evenly.
Use two 3.8x38mm screws to attach the installation brackets on the window frame.

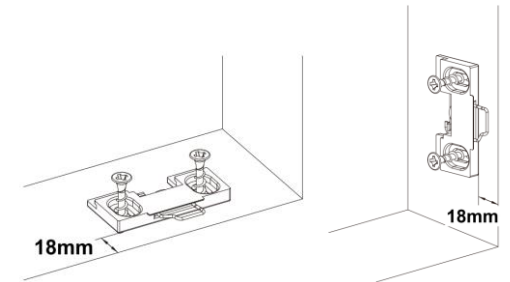

Step 4: Install the Screws for Bracket Clip

Mark the bracket clip location on the mounting surface as shown in the following pics



Perfect Arch & Eyebrow

Shade width $X \leq 1219\text{mm}$ Shade width $X > 1219\text{mm}$




Elongated Eyebrow

Shade width $X \leq 1219\text{mm}$ Shade width $X > 1219\text{mm}$

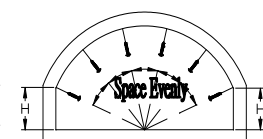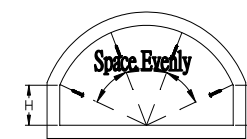


Triangle

Shade width $X \leq 1219\text{mm}$ Shade width $X > 1219\text{mm}$

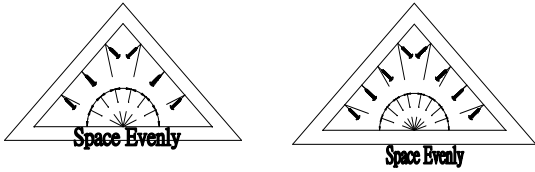

Step 6: Install the Bracket Clip

Insert the Bracket Clip into fabric and then close the Bracket Clip to keep it clamped on the fabric.
Double Cell:

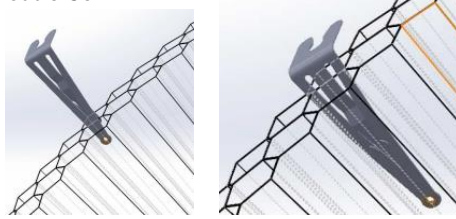

Step 1

Step 2


Single Cell:




Step 1

Step 2


Bracket Clip open and close illustration:

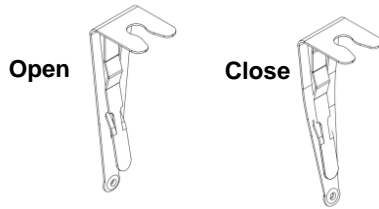

Step 7: Install the Shade

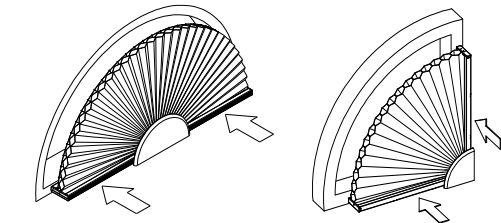


Place the front groove of the rail into the front iron wire of the bracket and then push forward to make the back groove of the rail snap into the back groove of the bracket.

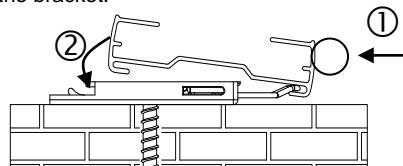

Step 1

Insert the Bracket Clip into the screw from the notch.

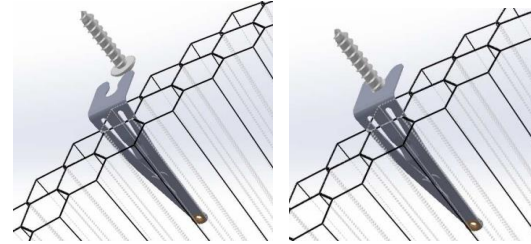


Step 1

Step 2

Remove the Shade

1. Take off the Bracket Clip from the screw.
2. Backward the rail from the front and then force the rail up from the back.

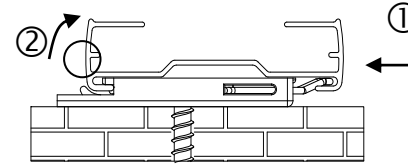


Cleaning

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).

Angle Top

Shade width $X \leq 610\text{mm}$ Shade width $X > 610\text{mm}$

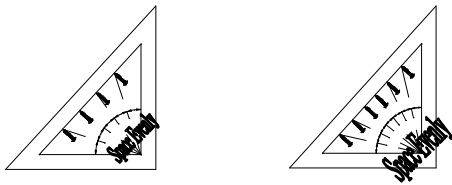

Install a #6x19mm screw into the corresponding location of the bracket clip about 29mm distance from the front window frame (do not drive the screw completely in and leave around 2mm gap to insert Bracket Clip)

